



# User Guide

## Ammonia Test Kit

### Always remember


1. To wash the test vials properly before test.
2. While matching the colour of the test sample with colour, always place the vial against a white background, to get maximum accuracy.
3. Test the samples as soon as possible after collecting it from the source.

### Test Procedure:

1. Fill the Test vial with 4 ml of pond/tank water using syringe.
2. Add 5 drops of Ammonia Reagent 1 followed by 5 drops of Ammonia Reagent 2 and 5 drops of Ammonia Reagent 3.
3. Close the cap and mix rigorously for Five seconds.
4. Leave the tube for Ten minutes and compare the colour with colour card.

### Calculations to determine the Toxic Ammonia out of total ammonical nitrogen (TAN)

Use the White coloured card given along with this kit to calculate the same.

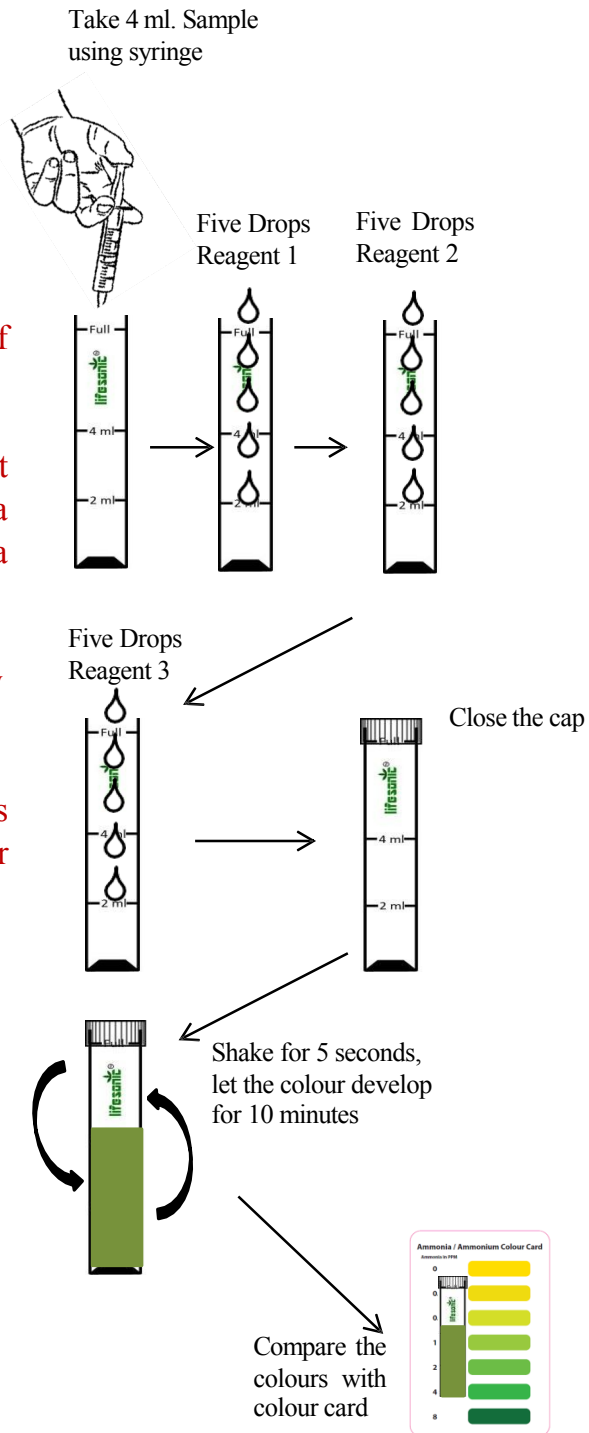

Store at 15-20°C in dry and dark place