


## Chlorine Test Kit

### Always remember

1. To wash the test vials properly before test.
2. While matching the colour of the test sample with colour, always place the vial against a white background, to get maximum accuracy.
3. Test the samples as soon as possible after collecting it from the source.

### Test Procedure:

1. Fill the Test vial with 4 ml of pond/ tank water using syringe.
2. Add 3 drops of Chlorine Reagent 1.
3. Close the cap and mix rigorously for five seconds.
4. Leave the tube for One minute and compare the colour with colour card. This reading is of free chlorine in sample.
5. Leave the tube for full 5 minutes and read against the colour chart. This reading is of total chlorine in sample.

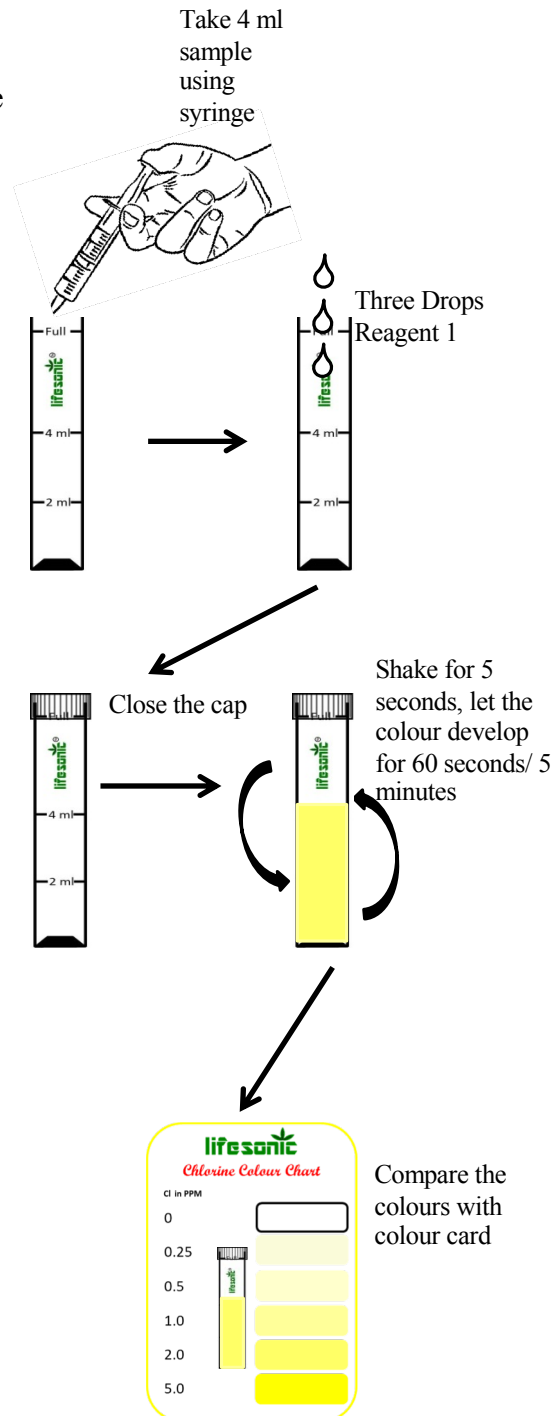

**Store at 15-20°C in dry and dark place**