


Nitrite Test Kit

Always remember

1. To wash the test vials properly before test.
2. While matching the colour of the test sample with colour, always place the vial against a white background, to get maximum accuracy.
3. Test the samples as soon as possible after collecting it from the source.

Test Procedure:

1. Fill the Test vial with 4 ml of pond/ tank water using syringe.
2. Add 3 drops of Nitrite Reagent 1
3. Mix well and add 1 scoop full of Nitrite Reagent 2.
4. Close the cap and mix rigorously for 15 seconds.
5. Leave the tube for five minutes and compare the colour with colour card.

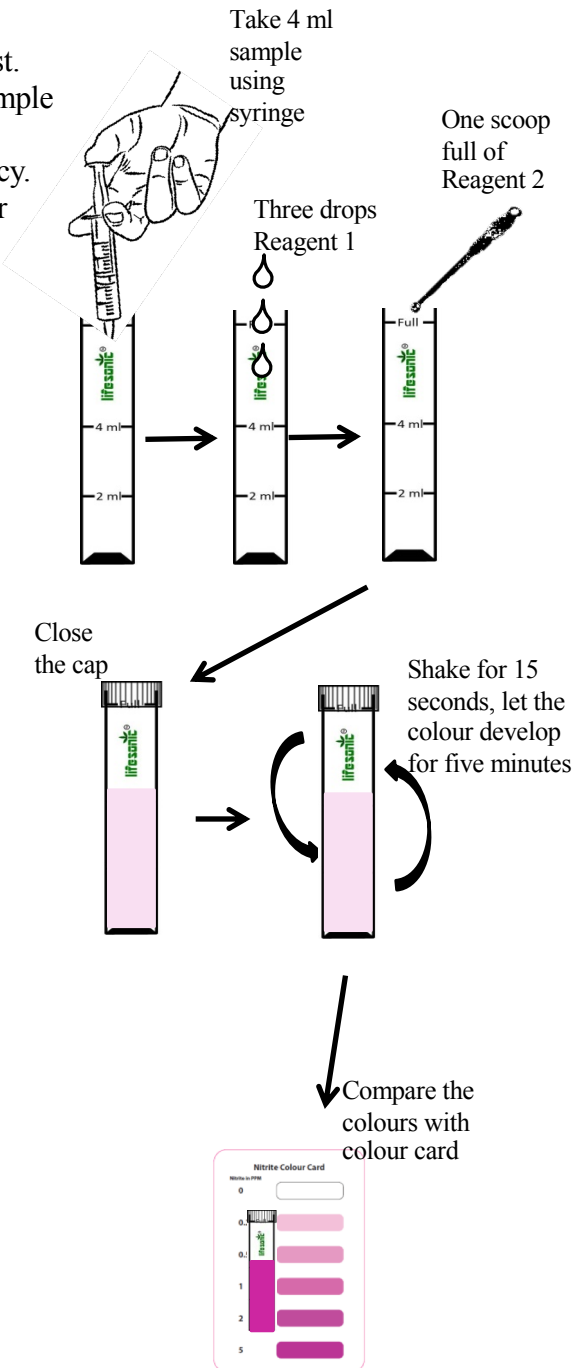

Store at 15-20°C in dry and dark place