


## Phosphate Test Kit

### Always remember

1. To wash the test vials properly before test.
2. While matching the colour of the test sample with colour, always place the vial against a white background, to get maximum accuracy.
3. Test the samples as soon as possible after collecting it from the source.

### Test Procedure:

1. Fill the Test vial with 4 ml of pond/ tank water using syringe.
2. Add 2 drops of P Reagent 1 followed by 2 drops of P Reagent 2 and 2 drops of P Reagent 3. Shake the mixture gently and add one scoopful of P Reagent 4.
3. Close the cap and mix rigorously for five seconds.
4. Leave the tube for Five minutes and compare the colour with colour card.

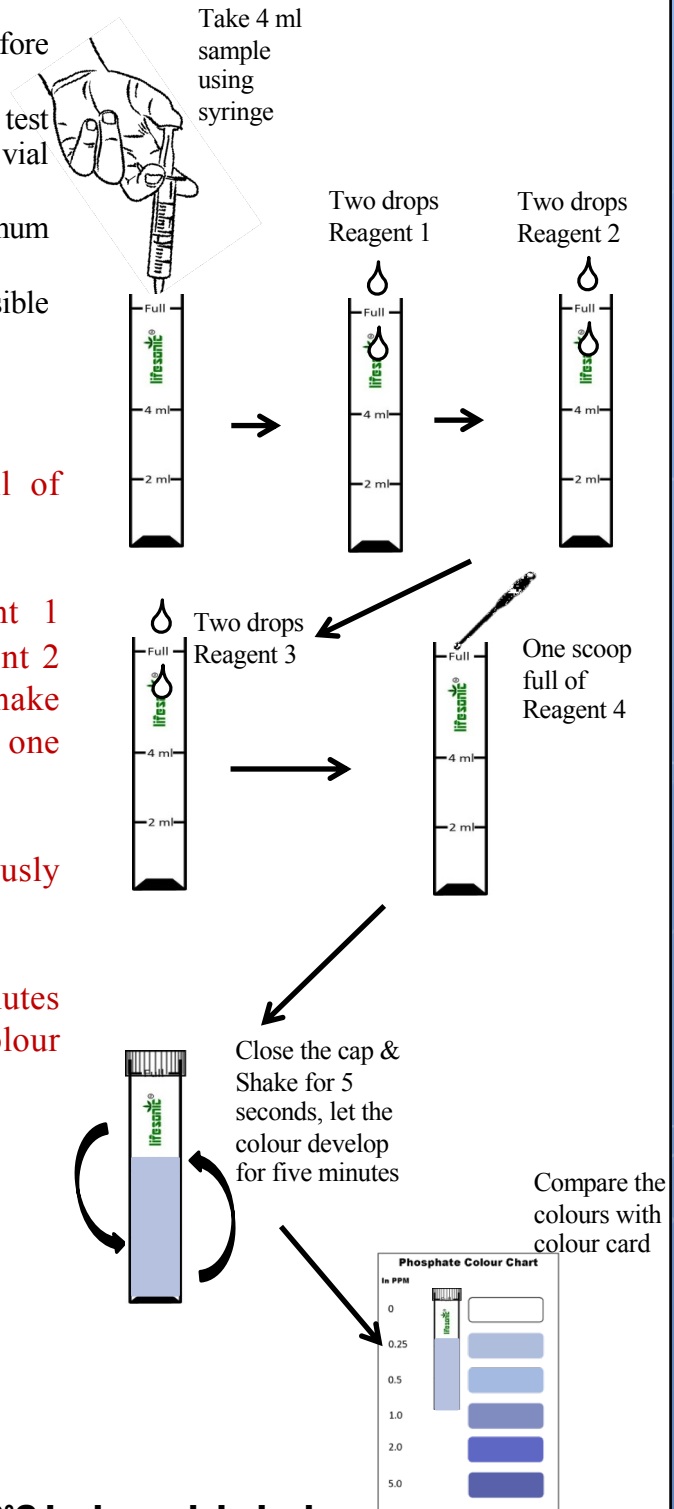

Store at 15-20°C in dry and dark place