


pH Test Kit

Always remember

1. To wash the test vials properly before test.
2. While matching the colour of the test sample with colour, always place the vial against a white background, to get maximum accuracy.
3. Test the samples as soon as possible after collecting it from the source.

Test Procedure:

1. Fill the test vial with 4 ml of pond/tank water using syringe.
2. Add 4 drops of pH Reagent 1.
3. Close the cap and mix rigorously for five seconds and leave the tube for 15 seconds.
4. Compare the colour with colour card.

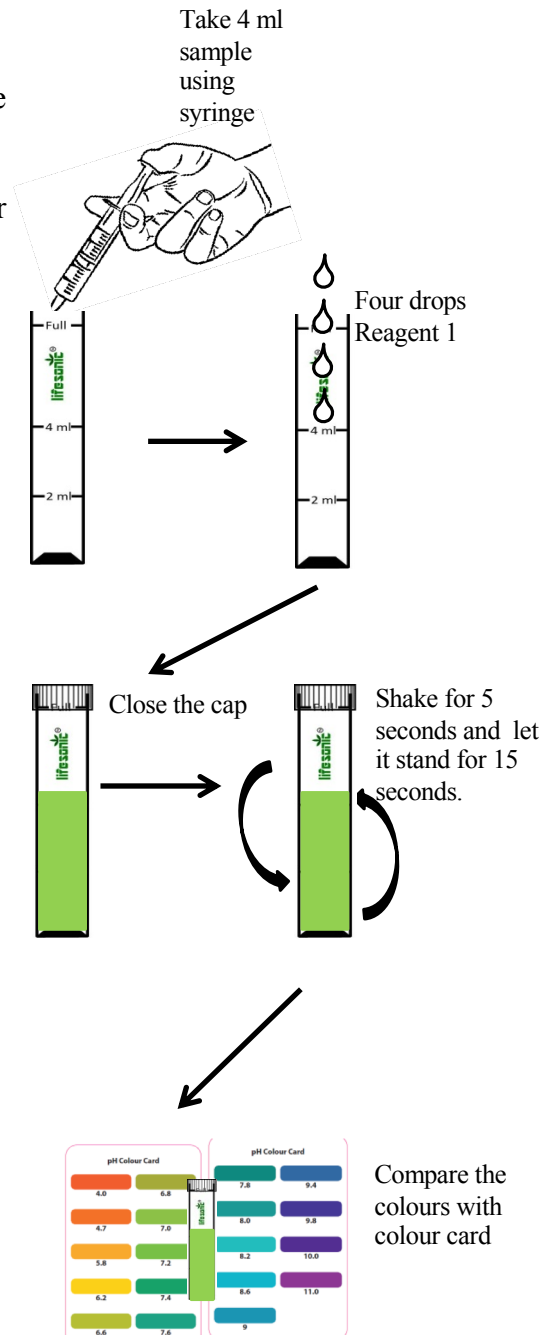

Store at 15-20°C in dry and dark place