


Nitrate Test Kit

Always remember

1. To wash the test vials properly before test.
2. While matching the colour of the test sample with colour, always place the vial against a white background, to get maximum accuracy.
3. Test the samples as soon as possible after collecting it from the source.

Test Procedure:

1. Fill the Test vial with 4 ml of pond/ tank water using syringe.
2. Add one scoopful of Nitrate Reagent 1 (**Do not make a heap of powder while using scoop**) in test sample followed by 4 drops of Nitrate Reagent 2 and 4 drops of Nitrate reagent 3 bottle.
3. Close the cap and mix rigorously for five seconds.
4. Leave the tube for Four minutes and compare the colour with colour card immediately within one minute.

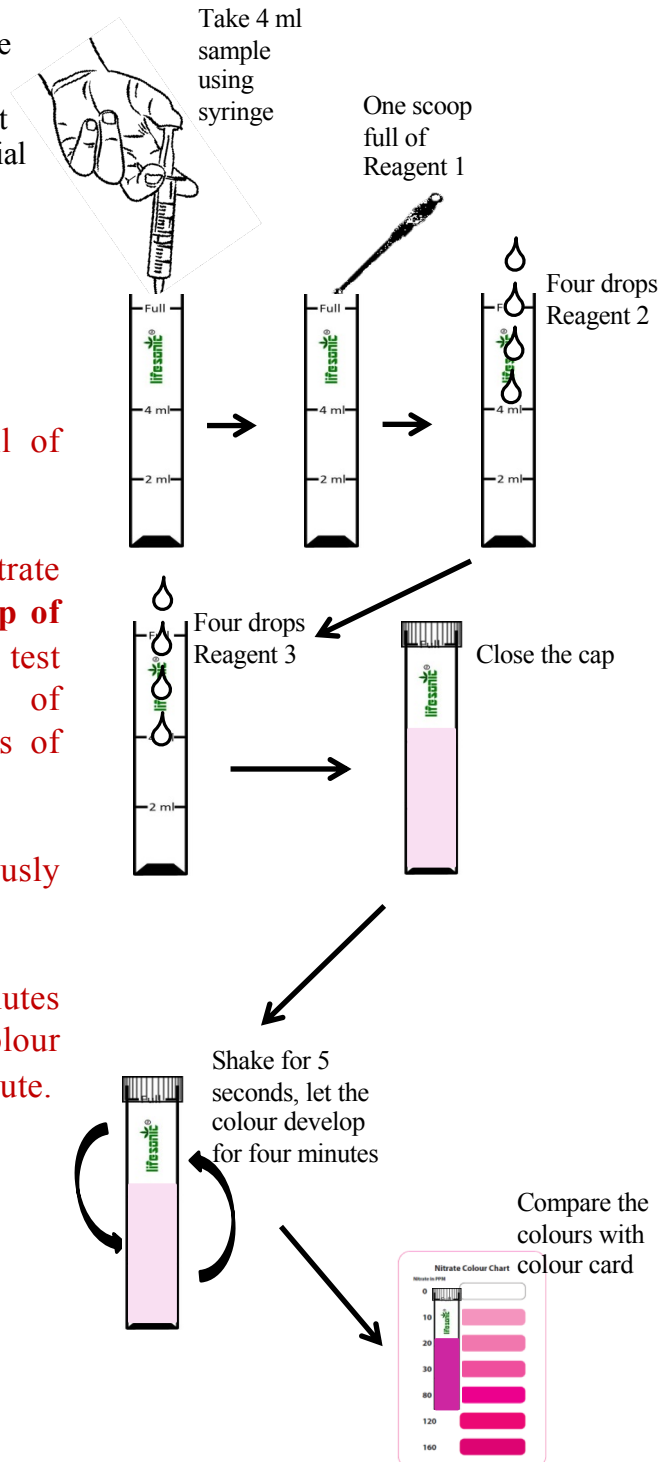

Store at 15-20°C in dry and dark place